



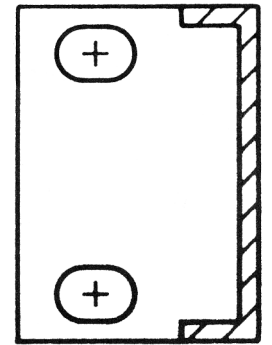

# STAND-OFF BRACKET MOUNTING INSTRUCTIONS

## TEMPLATE TO MOUNT STAND-OFF BRACKETS

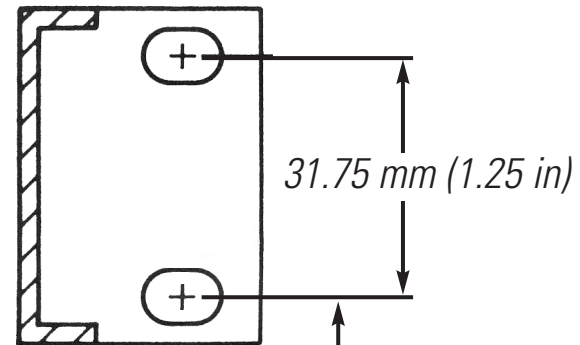

### WALL MOUNTING:

1. Use this template to mark mounting holes for the slots shown. Mark all eight positions and drill #20 size holes (approximately 4 mm or 0.16 in. diameter).
2. Mount brackets onto 12.7 mm (0.5 in.) thick plywood or other suitable surface.  
Note: Brackets are not recommended for mounting into sheetrock without reinforcement.
3. Mount all four brackets as shown using eight wood screws (4 screws included with each set of 2 brackets).
4. Secure intermediate distribution frame to the brackets using the four self-tapping machine screws (2 screws included with each set of 2 brackets).

### RACK MOUNTING:

1. Mount stand-off brackets onto 19 inch rack using eight #12-24 machine screws (4 screws included with each set of 2 brackets)
2. Secure intermediate distribution frame to the brackets using the four self-tapping machine screws (2 screws included with each set of 2 brackets).

### NOTE:



1. For full size of intermediate distribution frames, repeat the above steps for the lower half of the frame. (The same template may be used.) Position screw holes at the top of template over bottom set of screw holes just marked.  
Additional cross members for wire management may be mounted with only one set of stand-off brackets.

Each stand-off bracket assembly includes:

- Two brackets
- Four #12 x 1 inch wood screws
- Four #12-24 x 3/4 inch machine screws
- Two #10-32 x 1/2 inch self tapping machine screws

235.2 mm (9.26 in)

465.07 mm (18.31 in)

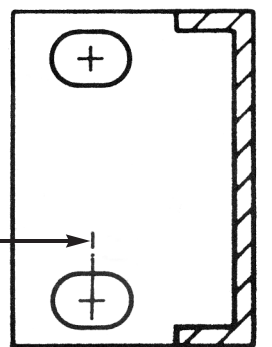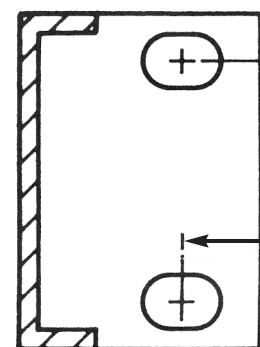

Global Headquarters  
Watertown, Connecticut USA  
Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site



www.siemon.com