


Command Center®

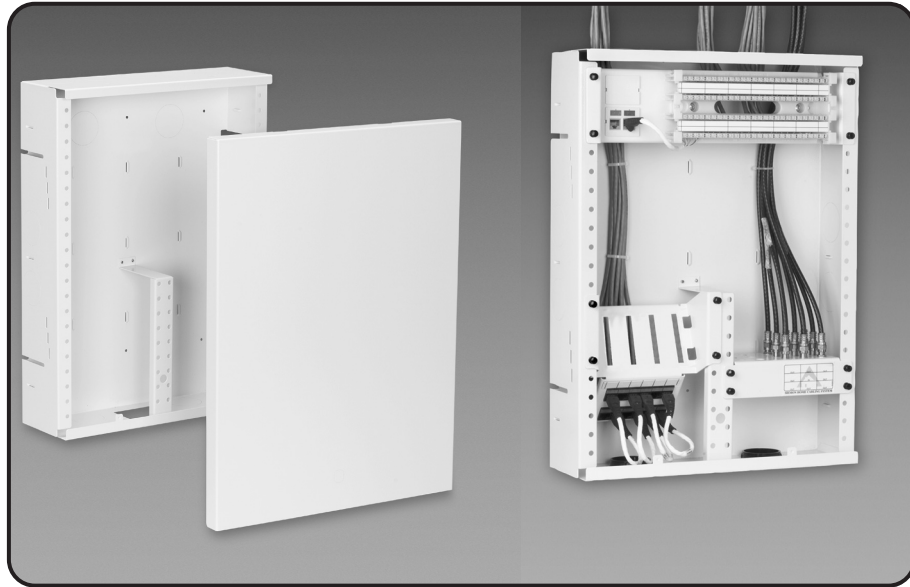


1 Remove knockouts before mounting enclosure to wall.

Note: It is recommended to remove as many knockouts as you might require in the future.



2 Snap grommets into knockouts of intended cable entry locations.

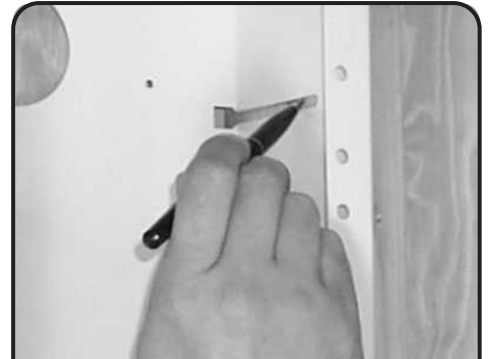

3 For Surface Mounting Go to Step # 7


Select proper location for enclosure between 86mm (16 in.) on center (O.C.) studs. Determine height of enclosure and mark studs 4 times for screw placement.



4 Remove enclosure and insert #6 x 1 in. wood screws (not provided). Leave approximately 1/8 in. of the screw sticking out.



5 Slide the slotted mounting holes of the enclosure onto the screw.

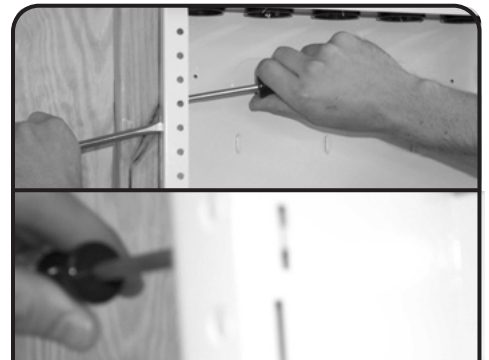


6 Torque all four screws down while holding a screwdriver in appropriate sheetrock slot.


Slots are used to hold the enclosure at the proper depth for mounting and placement of cover.

- Slot 1: 1/2" Sheetrock
- Slot 2: 5/8" Sheetrock
- Slot 3: 3/4" Sheetrock

Command Center

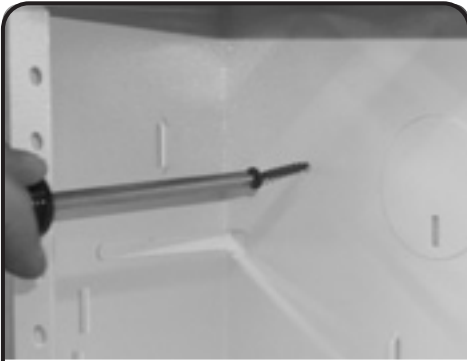

7 For surface mounting, locate holes as shown and secure to wall using appropriate screws.

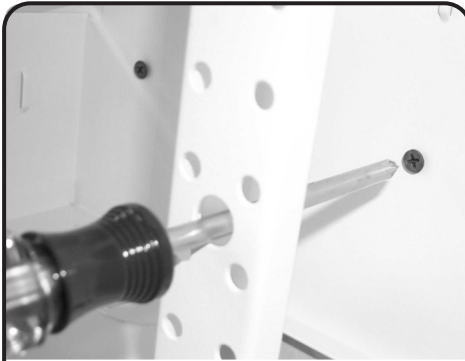


8 Note: 20" & 36" enclosures have cut-out in center rail for access to mounting screw.



9 Route cables through knockouts into enclosure.

It is recommended to separate all cables prior to entering enclosure

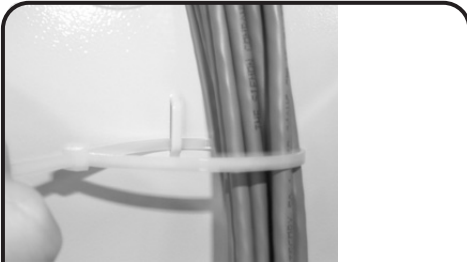

10 Lance tabs have been provided for easy cable management.



11 For cable protection it is recommended that all cables be coiled within the enclosure prior to termination.

To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Global Headquarters
Watertown, Connecticut USA
Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site

