

# STAND-OFF BRACKET MOUNTING INSTRUCTIONS

## WALL MOUNTING:

1. Using the guideline below, mark all eight positions of bracket at recommended distances and drill #20 size holes (approximately 4mm or 0.16 in. diameter).
2. Mount bracket onto 12.7 mm (0.5 in) thick plywood or other suitable surface.  
Note: Brackets are not recommended for mounting into sheetrock without reinforcement.
3. Mount all four brackets using eight wood screws (4 screws included with each set of 2 brackets).
4. Secure intermediate distribution frame to the brackets using the four self-tapping machine screws (2 screws included with each set of 2 brackets)


## RACK MOUNTING:

1. Mount stand-off brackets onto 19 inch rack using eight #12-24 machine screws ( 4 screws included with each set of 2 brackets)
2. Secure intermediate distribution frame to the brackets using the four self-tapping machine screws (2 screws included with each set of 2 brackets).

**NOTE:** For full size intermediate distribution frames, repeat the above steps for the lower half of the frame. Additional cross members for wire management may be mounted with only one set of stand-off brackets.

## EACH STAND-OFF BRACKET ASSEMBLY INCLUDES:

- Two brackets
- Four #12x1 inch wood screws
- Four #12-24x3/4 inch machine screws
- Two #10-32x1/2 inch self tapping machine screws

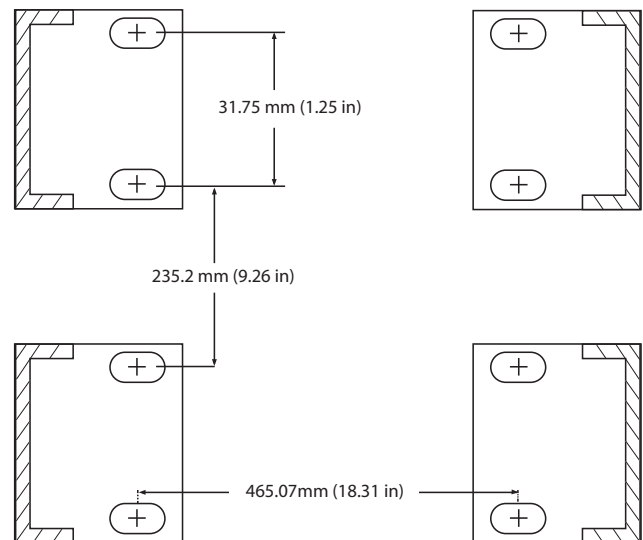

**North America**  
Watertown, CT USA  
Phone (1) 860 945 4200 US  
Phone (1) 888 425 6165 Canada

**Europe/Middle East/Africa**  
Surrey, England  
Phone (44) 0 1932 571771

**Asia/Pacific**  
Shanghai, P.R. China  
Phone (86) 21 5385 0303

**Latin America**  
Bogota, Colombia  
Phone (571) 657 1950

Rev. C 06/12 100.29408

© 2012 The Siemon Company