


VPOD Internal Cable Tray Instructions

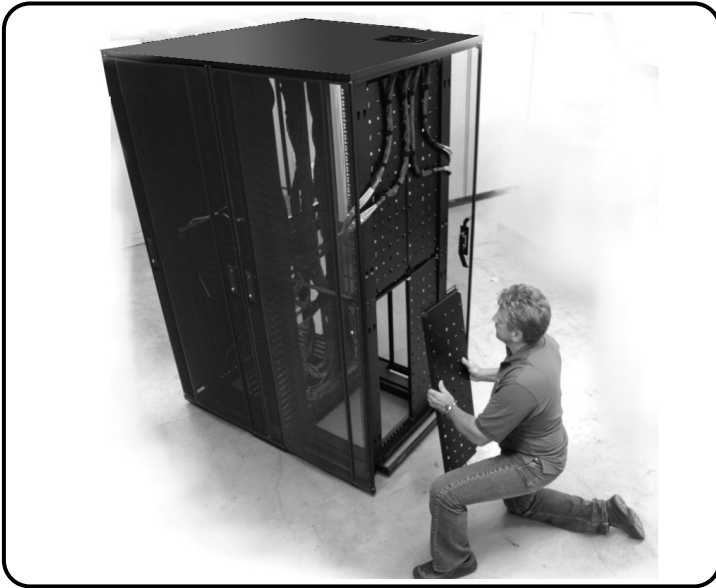

Parts Description

VPOD Internal Cable Tray
(4) Phillips Head Screws
(4) Plastic cup Washers
(4) Cage Nuts



Required Tools

#2 Phillips Screw Driver




1 Determine where on the internal horizontal rails you're required to provide cable support.



2 Place the cable tray onto the rails to determine the best locations for the "cage nuts" that are required to be installed into the horizontal rails.



3 Remove the panel, and install the necessary number of cage nuts.

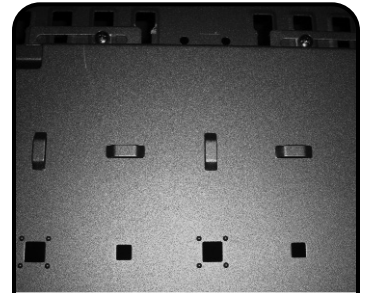

4 Place the cable tray back on to the horizontal rails and secure with the #2 Phillips screws provided.



5 Repeat these steps for each additional cable tray.

NOTE: A total of (4) Cable Trays can be installed on each side of the cabinet.

To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Global Headquarters
Watertown, Connecticut USA
Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site

