



# Cleaning Stick Instructions for SC PP-CT-SC



## Adapter

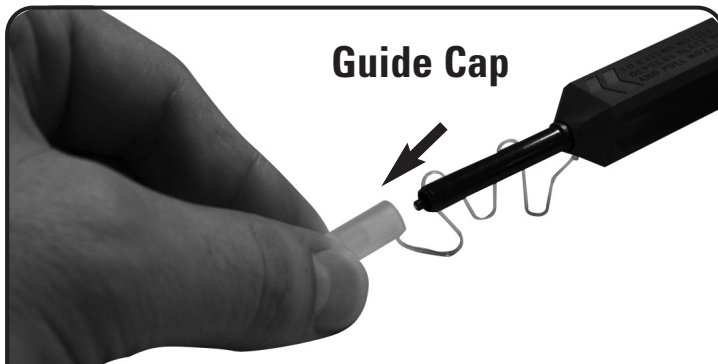

**1A** Remove Guide Cap from the device.

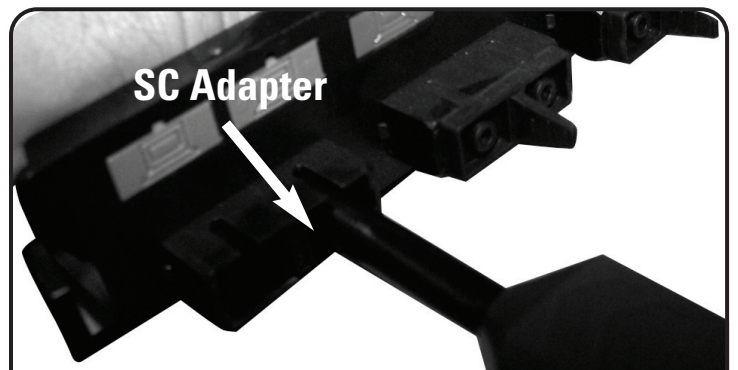

**2A** Insert tip of cleaner into SC Adaptor.



**3A** Push the outer shell to start cleaning the SC connector end face. A "click" sound indicates end of cleaning process. Close the cover after use.

**Note:** Be careful not to slant the SC connector while inserting into the adapter. Do not overly exert force during insertion as this may cause damage to both the LC connector and the PP-CT-SC. If pushing outer shell is inhibited, remove PP-CT-SC from adapter and ensure that there is no sizeable debris inhibiting the cleaning process

# Cleaning Stick Instructions for SC PP-CT-SC

## Connector

Cover




**1B** Open cover on the guide cap.



**2B** Insert SC connector into the guide cap.

"Click"

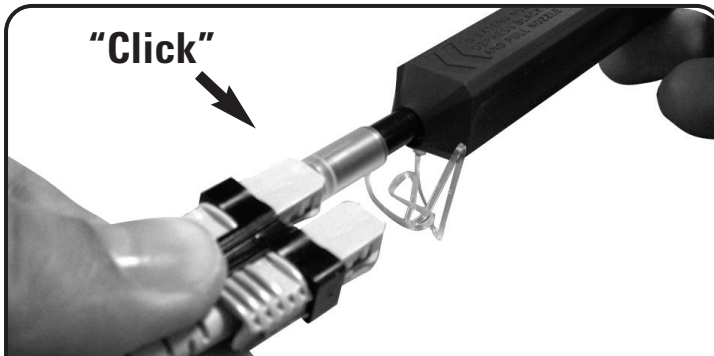

**3B** Push the outer shell to start cleaning the SC connector end face. A "click" sound indicates end of cleaning process. Close the cover after use.

**Note:** Be careful not to slant the SC connector while inserting into the Guide cap. Do not overly exert force during insertion as this may cause damage to both the SC connector and the PP-CT-SC. If pushing outer shell is inhibited, remove PP-CT-SC from adapter and ensure that there is no sizeable debris inhibiting the cleaning process

### Global Headquarters

Watertown, Connecticut USA

Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site:  
[www.siemon.com](http://www.siemon.com)

