




SIEMON™

www.siemon.com

MAX® SERIES HERMAN MILLER ETHOSPACE MODULAR FURNITURE ADAPTER INSTRUCTIONS

P/N: MX-MFP-HMA-(XX)

MINIMUM DEPTH CLEARANCE FOR FLAT MAX MODULE: 17.01 mm (0.67 in.)
MINIMUM DEPTH CLEARANCE FOR ANGLED MAX MODULE: 9.1 mm (0.36 in.)
FITS PANEL OPENING SIZE: 75.74 mm x 47.80 mm (2.982 in. x 1.882 in.)

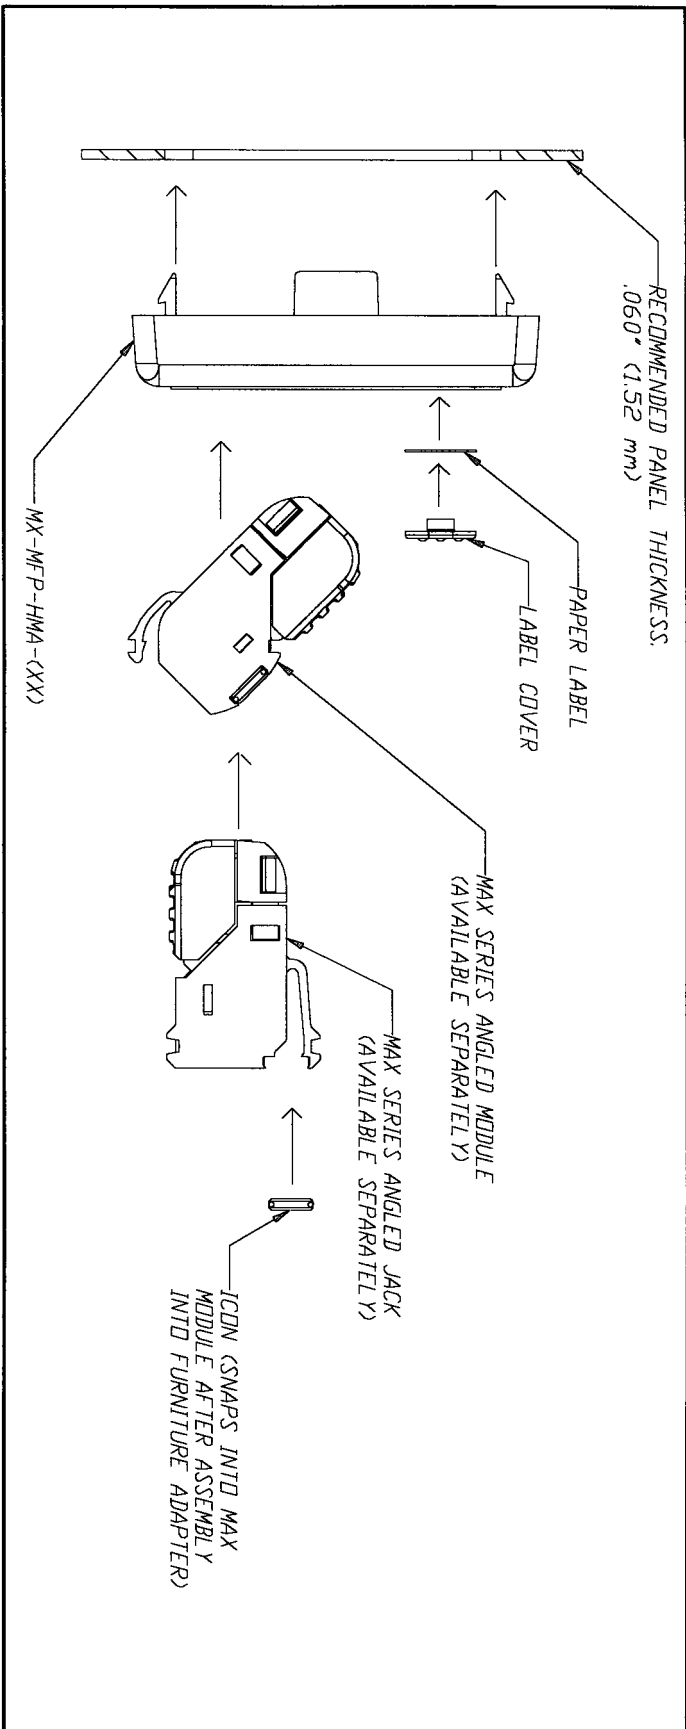

1. FEED CABLE THROUGH THE ADAPTER OPENING AND TERMINATE CABLE TO MAX® MODULE.
2. SNAP ADAPTER INTO PANEL CUT-OUT.
3. SNAP MAX® MODULE INTO ADAPTER.
4. USE PAPER DESIGNATION STRIP TO LABEL ADAPTER AND SECURE WITH CLEAR LABEL COVER.

NOTE:
CONSULT A CUSTOMER SERVICE REPRESENTATIVE FOR ADDITIONAL INFORMATION REGARDING COMPATIBILITY WITH OTHER FURNITURE MANUFACTURERS.

The Americas

The Siemon Company
Siemon Business Park
101 Siemon Company Drive
Watertown, CT 06795, USA
Phone + 1 (860) 945-4200
Fax + 1 (860) 945-4225

Europe & Middle East

The Siemon Company, Ltd.
Siemon House - Lansbury Estates
102 Lower Guildford Road
Knaphill, Working
Surrey, GU21 2EP, England
Phone + 44 (0) 1 483-480040
Fax + 44 (0) 1 483-480043

Asia/Pacific

The Siemon Company
Unit 9/252 Allambie Road
Allambie Heights NSW 2100
Sydney
Australia
Phone +61 (2) 9452 2666
Fax +61 (2) 9452 2676