




www.siemon.com

MAX® SERIES HERMAN MILLER ETHOSPACE MODULAR FURNITURE ADAPTER INSTRUCTIONS
P/N: MX-MFP-HME-(XX)

MINIMUM DEPTH CLEARANCE FOR FLAT MAX MODULE: 13.8 mm (0.55 in.)
 MINIMUM DEPTH CLEARANCE FOR ANGLED MAX MODULE: 6.1 mm (0.24 in.)
 FITS PANEL OPENING SIZE: 72.0 mm x 44.5 mm (2.835 in. x 1.750 in.)

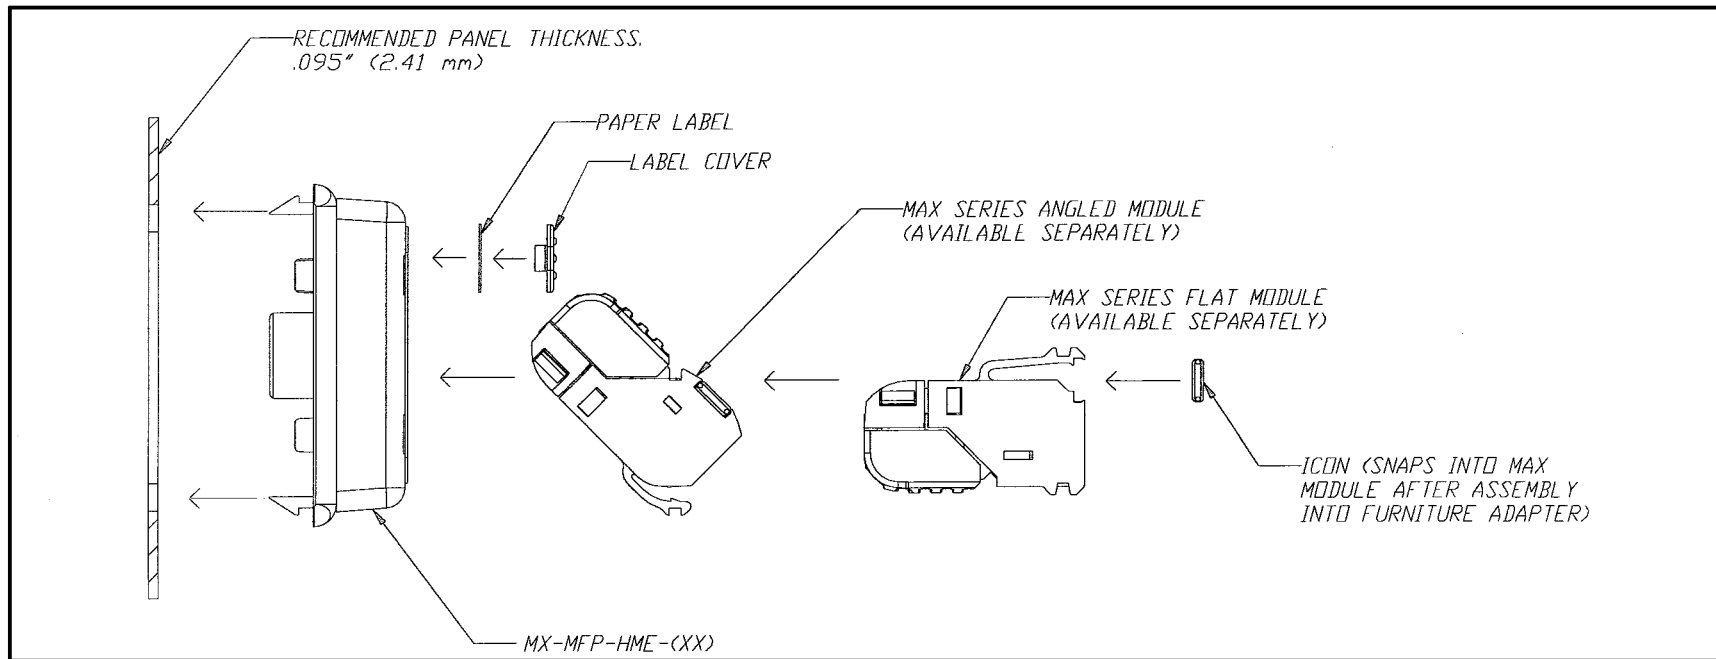

1. FEED CABLE THROUGH THE ADPTER OPENING AND TERMINATE CABLE TO MAX® MODULE.
2. SNAP ADAPTER INTO PANEL CUT-OUT.
3. SNAP MAX® MODULE INTO ADAPTER.
4. USE PAPER DESIGNATION STRIP TO LABEL ADAPTER AND SECURE WITH CLEAR LABEL COVER.

NOTE:
 CONSULT A CUSTOMER SERVICE REPRESENTATIVE FOR ADDITIONAL
 INFORMATION REGARDING COMPATIBILITY WITH OTHER FURNITURE
 MANUFACTURERS.

Americas

Siemon - USA
 101 Siemon Company Drive
 Watertown, CT 06795, USA
 Phone + 1 (860) 945-4200
 Fax + 1 (860) 945-4225

Europe

Siemon - UK
 36-48 Windsor Street
 Cjertse, Surrey
 KT16 8AX, England
 Phone: (44) (0) 1932 571771
 Fax: (44) (0) 1932 575070

Asia Pacific

Siemon - China (Shanghai)
 Rm. 3407 - 3408,
 Hong Kong Square S.
 No. 283, Huai Hai Road
 Shanghai, 200021, P.R. China
 Phone: (86) 21 6390 6778
 Fax: (86) 21 6384 0167

100.5050 Rev. B 3/05