

INSTRUCTIONS FOR HERMAN MILLER CT-MODULAR FURNITURE ADAPTERS




ETHOSPACE:

USE CT-MFP-HME-01 IN BELTLINE OPENING
WITH ONE CT-DOUBLE COUPLER (FIGURE I)
OR CT-MFP-HMA IN BASE OPENING
WITH TWO CT-DOUBLE COUPLERS (FIGURE II).

SERIES A02:

USE CT-MFP-HMA IN BASE OPENING
WITH TWO CT-DOUBLE COUPLERS (FIGURE II).

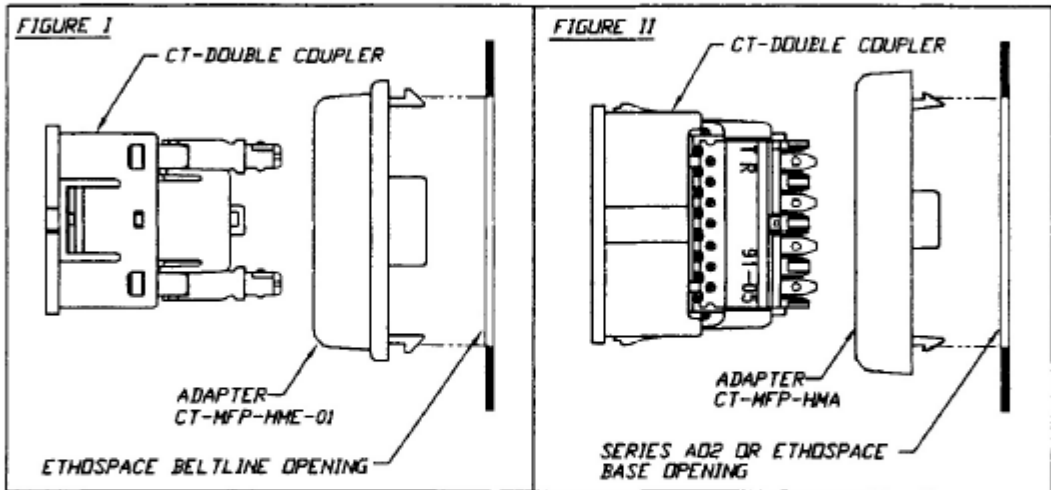

1. SNAP ADAPTER INTO PANEL OPENING.
2. FEED WIRES THROUGH ADAPTER OPENING AND TERMINATE TO CT-DOUBLE COUPLER(S).
3. SNAP COUPLER(S) INTO ADAPTER.
4. THE ADAPTER MAY BE REMOVED BY DEFEATING THE LATCHES WITH A SMALL SCREWDRIVER. SLOTS HAVE BEEN PROVIDED IN THE FRONT OF THE ADAPTER FOR ACCESSING THE LATCHES.

NOTE: ADAPTERS ARE ALSO AVAILABLE FOR HERMAN MILLER SERIES A02.
PLEASE CONSULT A CUSTOMER SERVICE REPRESENTATIVE FOR ADDITIONAL INFORMATION REGARDING OTHER
MODULAR FURNITURE APPLICATIONS.